


Fitting Marmox Showerlays to Wooden Floors

- The Marmox Showerlay is designed to be fully supported over its complete area and fitted onto a Marmox Dallmer Drain.
- It is essential that the drain is correctly installed and positioned before fixing the Showerlay.
- Where floor boarding has been removed to gain space, the gaps between the joists should be infilled with suitable boarding to support the Showerlay.
- Best used with Marmox Boards on the floor and walls to create a fully waterproof wetroom.

Lowering to floor level...



Lay on existing floor...

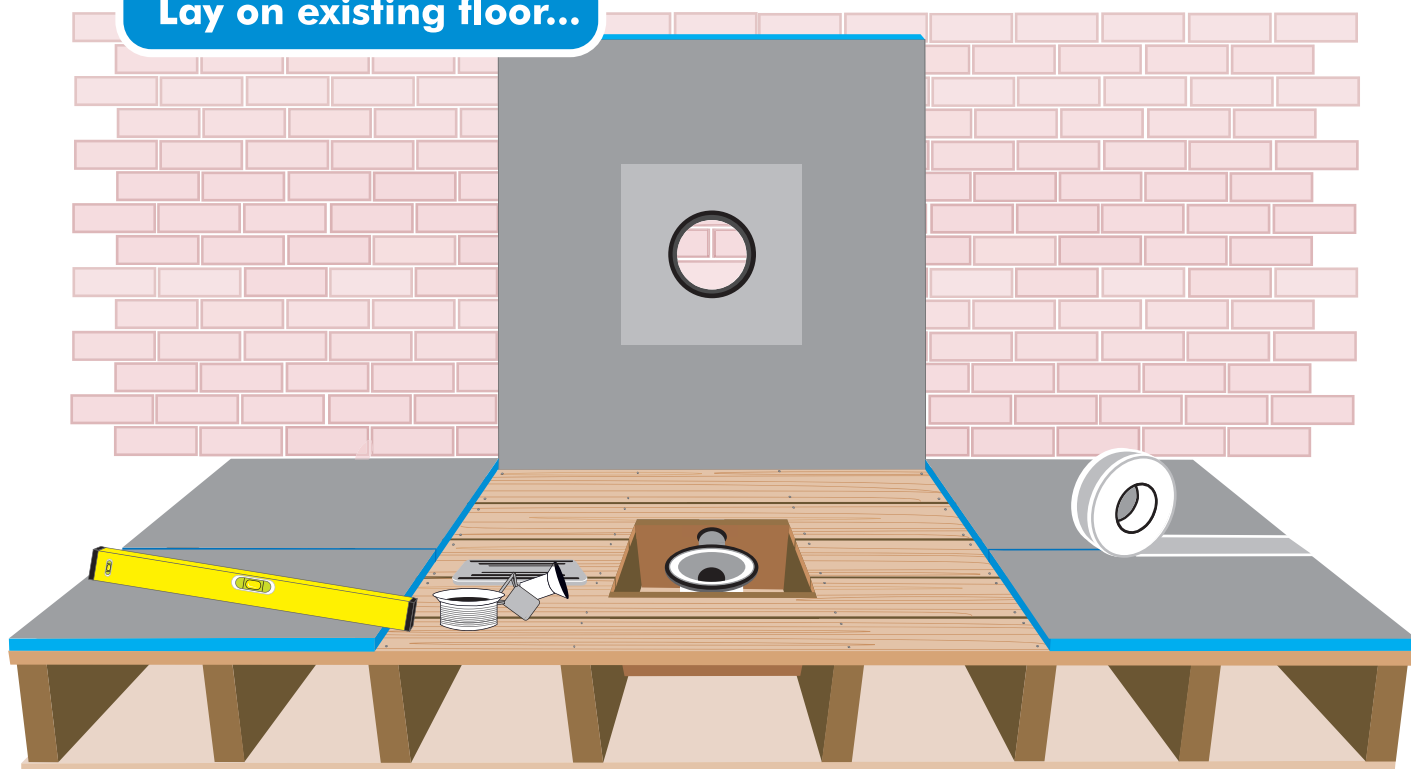

For more information please contact us...

Web www.marmox.co.uk Tel: 01634 862277 Fax: 01634 864223

THE FOLLOWING INFORMATION IS FOR GUIDANCE ONLY

